



JUSTRITE®

The Right Choice

NEW

Safety Containers

**Protection PLUS
Performance**



www.justritemfg.com



The Right Choice



Safety and Quality Assurance

The potential for disaster when handling flammable liquids demands serious solutions for protection. Just one gallon of vaporized gasoline can explode with the same force as twenty sticks of dynamite. Justrite set the standards for safety and backs them with the toughest approvals out there... Including FM Global and/or Underwriters Laboratories. An exclusive Ten-Year Warranty is your assurance of getting the best when you buy Justrite®.



100% Leak Tested

Backed by our
10 Year
Limited Warranty

*Protection plus
advanced performance...*

**when handling volatile fuels,
chemicals, and solvents**



**Innovative new features make
Justrite® Safety Cans your
First Line of Defense
against possible fire
and explosion when pouring
and storing flammable liquids**



Control vapors and safely contain hazardous liquids to protect against personal injury and property loss



Comply with OSHA regulations and state and local fire codes

Type I

**Economical, ideal for pouring
into big openings**


One opening from which
to fill and pour



vs Type II AccuFlow™

**Easiest to use - for the smoothest,
fastest, most controlled pouring**

Two openings; top opening
for filling, 2nd opening
with hose attached for
targeted pouring

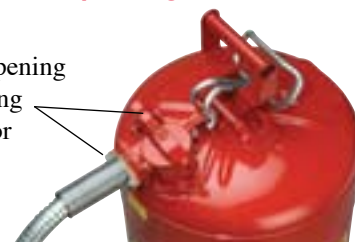



Exclusive, vented Type II AccuFlow™ manifold with a Safe-Squeeze® trigger handle provides the fastest, smoothest, most controlled pouring

NEW



Flexible 9" (229 mm) hose, offers targeted pouring into small openings



Quick-fill port on Type II AccuFlow™ features an ergonomically designed lift lever that opens wide for easy filling

NEW



Extra capacity in all cans accommodates oil additives for two cycle engines



Half-inch (13mm) grip lip along bottom supports pouring and resists accidental punctures when placed on uneven surfaces



Stainless Steel flame arrester stops flashback ignition, provides faster liquid flow, and offers superior chemical and corrosion resistance. Long 3-1/2" (88mm) length for safe secure insertion of gas nozzle

NEW



Optional 2-position polypropylene funnel for Type I cans aids in pouring and folds down for compact storage and filling



Large ID zone permits user labeling to avoid misuse, mishaps with incompatible mixtures, or to identify owner or department

NEW



Type II AccuFlow™

Comfortable, rounded handle doesn't cut into hand

Leakproof, positive pressure relief lid automatically vents to prevent rupture or explosion. It is spring-loaded to self-close controlling vapors and spills

100% leak tested and fully compliant

Trilingual warning label

Free swinging handle with counter-balanced design leverages the weight of the can against the opening mechanism for easy pouring and carrying

100% steel body and handle constructed of 24-gauge galvanized steel finished in an environmentally friendly, tough powder paint that resists solvents and stands up to abuse

Reinforcing ribs strengthen walls and reduce denting

Double lock seams at base & top offer four thicknesses of steel for extra "bumper guard" protection

Exclusive 10-year limited warranty

Type I





The Right Choice



Protection plus the easiest, fastest, most controlled liquid flow ever!

Safety and maximum convenience are combined in these

Type II AccuFlow™ Safety Cans

Durable galvanized steel Type II AccuFlow™ safety cans offer the most convenient, safest way to store and dispense flammable liquids. Built to meet OSHA and NFPA 30, they have been independently fire tested and approved by FM and UL. The exclusive vented AccuFlow™ manifold and Safe-Squeeze® trigger handle provide the easiest, fastest, most controlled liquid flow ever. Flexible metal hose is 9" (229mm) long to reach small openings. Ergonomically designed quick-fill port with comfort lift lever makes filling easier than ever.

Fill port is equipped with a long length, long life stainless steel flame arrester which reliably dissipates heat to prevent flashback ignition. Leakproof, positive pressure relief lid automatically vents to prevent rupture or explosion and self-closes to control vapors and spills. Trilingual warning label includes a large ID zone for user labeling of contents to avoid misuse, reduce the potential for incompatible mixtures, or designate department location or individual owner. Like all Justrite steel safety cans, quality is backed by a 10-year limited warranty.

The Secret to Safe, Precision Pouring

AccuFlow™

Patented design!

Air displacement vent

Quick-fill port
with ergonomic
lift lever

Auto venting,
leakproof
self-closing lid

Flexible hose

Stainless steel flame arrester

Rounded comfort
handle

Safe-Squeeze®
trigger



**100% Leak
Tested**

Cans backed by our
**10 Year
Limited Warranty**

Protection plus **AccuFlow™** advanced performance...

- Exclusive, vented AccuFlow™ manifold for the fastest, smoothest, most controlled pouring
- Auto venting, pressure relief cap prevents ruptures from pressure build-up
- Leakproof, self-closing gasketed lid controls vapors and spills
- Chemically resistant, long life stainless steel flame arrester stops flashback ignition
- Ergonomic offset fill port with comfort lift lever makes filling easier than ever
- Easy-to-use Safe-Squeeze® trigger for accurate control of liquid flow
- Extra large ID Zone reduces misuse. Danger warning in three languages.
- Flexible 9" (229mm) hose available in two diameters
- Fully compliant. 10 year warranty




Use color to help designate contents and segregate liquids.



kerosene oil flammables diesel

Safety cans are available in four colors that are suitable for the storage of liquids. Now it's easy to differentiate between various types of liquids and avoid costly errors when more than one type of liquid is needed at a worksite.

For added safety and convenience, the label on Justrite safety cans includes an extra large ID zone to make it easy for the user to mark can contents, designate department/shift/user, etc.

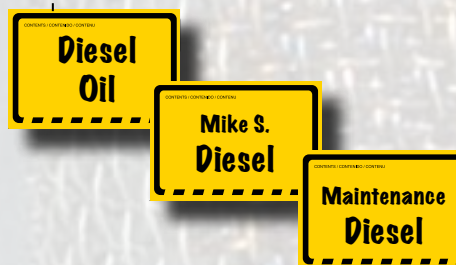

Approval Key

FM	FM Global Tested and Approved
UL/ULC	Underwriters Laboratories Listed in the U.S. and Canada
TÜV	TÜV Technical Inspection Association Certified

100% leak tested. 10-year warranty.

Meets OSHA 1910.106 and NFPA Code 30. CARB Compliant.

Type II AccuFlow™ Steel Safety Cans

Capacity Gallon (Liter)	Hose Dia Size (mm)	Dimensions Outer Dia. x H (mm)	Approval/Listing Regulation	Ship Wt. Lbs/Kg	Red Model No.	Yellow Model No.	Blue Model No.	Green Model No.
1 (4)	5/8"(16)	9½" x 10½" (241 x 267)	FM,UL/ULC,TÜV	7/3	7210120	7210220	7210320	7210420
2 (7.5)	5/8"(16)	9½" x 13¼" (241 x 337)	FM,UL/ULC,TÜV	8/4	7220120	7220220	7220320	7220420
2½ (9.5)	5/8"(16)	11¾" x 12" (298 x 305)	FM,UL/ULC,TÜV	8/4	7225120	7225220	7225320	7225420
2½ (9.5)	1"(25)	11¾" x 12" (298 x 305)	FM,UL/ULC,TÜV	8/4	7225130	7225230	7225330	7225430
5 (19)	5/8"(16)	11¾" x 17½" (298 x 445)	FM,UL/ULC,TÜV	10/5	7250120	7250220	7250320	7250420
5 (19)	1"(25)	11¾" x 17½" (298 x 445)	FM,UL/ULC,TÜV	10/5	7250130	7250230	7250330	7250430



The Right Choice

**Dependable, compliant,
longest lasting
protection ever!**


**Reduce fire risks and avoid injury
with these hardworking**

Type I Safety Cans

Fully compliant Safety Cans feature a high performance, chemical resistant stainless steel flame arrester that stops flashback ignition, provides faster liquid flow, and offers exceptional durability and corrosion protection for long life. This extra long precision mesh screen is a full 3-1/2" (88mm) long to ensure safe insertion of gas nozzle with metal-to-metal contact eliminating the potential of a spark and possible explosion.

Self-closing lid controls vapors and spills and unique counterbalanced, ergonomic design makes it easy to use. Leakproof, positive pressure relief cap automatically vents to guard against rupture or explosion. Warning label includes large ID zone for user labeling of contents to avoid misuse, reduce the potential for incompatible mixtures, or designate department location or individual owner. Other convenience features include a rounded comfort handle that swings to help in carrying heavy loads, reinforcing ribs for bumper guard protection, and large 1/2" (13mm) grip lip along bottom to support pouring.

To aid pouring into smaller openings, hinged Poly Funnel attaches easily to Type I steel can sizes 1 gallon (4 liter) and above. Design allows you to fill the can without removing the funnel and takes up less space when storing. Durable, large polypropylene rounded bowl provides protection from splashing and spillage. Two-stepped nozzle tip permits trimming to larger diameter. Funnel may be purchased separately or is available in a combination value pack with a Safety Can.

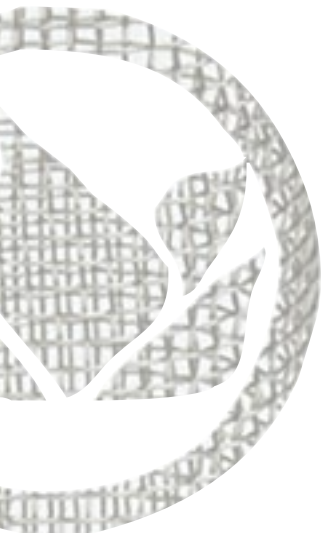

Protection plus advanced performance...

- Meets OSHA & NFPA, FM Approved.
UL/ULC Listed, TÜV Certified
- Stainless steel flame arrester for exceptional corrosion protection – reliably dissipates heat to prevent flashback ignition
- Long 3-1/2" (88mm) length arrester allows safe, secure placement of gas nozzle. Chemically resistant, durable stainless construction is long lasting
- Leakproof, positive pressure relief cap automatically vents to prevent rupture or explosion
- Self-closing lid controls vapors and spills
- Large ID zone permits user labeling of contents to avoid misuse, mishaps with incompatible mixtures, or to identify owner or department location
- Ergonomic counterbalance design for easy pouring with rounded, swinging comfort handle for easy carrying
- Rugged steel with tough powder paint. 10 year warranty



Smallest sized cans feature a trigger handle for pouring

Approval Key

FM	FM Global Tested and Approved
UL/ULC	Underwriters Laboratories Listed in the U.S. and Canada
TÜV	TÜV Technical Inspection Association Certified

100% leak tested. 10-year warranty.

Meets OSHA 1910.106 and NFPA Code 30. CARB Compliant.

Optional 2-position durable polypropylene funnel aids in pouring

Color coding reduces accidents

Type I Steel Safety Cans

Capacity Gallon (Liter)	Dimensions Outer Dia. x H (mm)	Approval/Listing Regulation	Ship Wt. Lbs/Kg	Red Model No.	Yellow Model No.	Blue Model No.	Green Model No.
1 pt. (.5)	4 ³ / ₈ " x 6 ³ / ₄ " (117 x 172)	FM,UL/ULC,TÜV	2/1	10001	10011	—	—
1 qt. (1)	4 ³ / ₈ " x 8 ¹ / ₄ " (117 x 210)	FM,UL/ULC,TÜV	2/1	10101	10111	—	—
1 (4)	9 ¹ / ₂ " x 11" (241 x 279)	FM,UL/ULC,TÜV	4/2	7110100	7110200	7110300	7110400
2 (7.5)	9 ¹ / ₂ " x 13 ³ / ₄ " (241 x 349)	FM,UL/ULC,TÜV	5/2	7120100	7120200	7120300	7120400
2½ (9.5)	11 ³ / ₄ " x 11½" (298 x 292)	FM,UL/ULC,TÜV	6/3	7125100	7125200	7125300	7125400
5 (19)	11 ³ / ₄ " x 16 ⁷ / ₈ " (298 x 429)	FM,UL/ULC,TÜV	8/4	7150100	7150200	7150300	7150400

Accessory

Funnel	½" x 11¼" (13 x 286)	—	1/1	11202Y	Poly Funnel
--------	----------------------	---	-----	--------	-------------

Type I Steel Safety Cans with Funnels

Capacity Gallon (Liter)	Dimensions Outer Dia. x H (mm)	Approval/Listing Regulation	Ship Wt. Lbs/Kg	Red Model No.	Yellow Model No.	Blue Model No.	Green Model No.
1 (4)	9 ¹ / ₂ " x 11" (241 x 279)	*FM,UL/ULC,TÜV	4/2	7110110	7110210	7110310	7110410
2 (7.5)	9 ¹ / ₂ " x 13 ³ / ₄ " (241 x 349)	*FM,UL/ULC,TÜV	5/2	7120110	7120210	7120310	7120410
2½ (9.5)	11 ³ / ₄ " x 11½" (298 x 292)	*FM,UL/ULC,TÜV	6/3	7125110	7125210	7125310	7125410
5 (19)	11 ³ / ₄ " x 16 ⁷ / ₈ " (298 x 429)	*FM,UL/ULC,TÜV	8/4	7150110	7150210	7150310	7150410

*Approvals apply to safety can

**Customer Service****North America**

Tel: 1-800-798-9250
Fax: 1-800-488-5877

International

Tel: 1-217-234-7494
Fax: 1-217-234-7420

custserv@justritemfg.com

Operations

Justrite Manufacturing Company, L.L.C.
3921 DeWitt Avenue
Mattoon, IL 61938 U.S.A.

Manufacturing, Finance (billings), Purchasing, Information Technology & Human Resources
Tel: 1-217-234-7486
Fax: 1-217-234-7632

Corporate

Justrite Manufacturing Company, L.L.C.
2454 Dempster Street
Des Plaines, IL 60016 U.S.A.

Sales, Marketing & Administrative
Tel: 1-847-298-9250
Fax: 1-847-298-9261

Warehouse Shipping Locations:*Illinois:*

Justrite North America
3501 Justrite Drive
Mattoon, IL 61938 U.S.A.
Tel: 1-217-234-7350
Fax: 1-217-234-3160

California:

Western Safety Associates
267 Winfield Circle
Corona, CA 92880 U.S.A.
Tel: 1-951-371-8685
Fax: 1-951-371-2496

Germany:

Justrite Europe
Muendelheimer Weg 52
40472 Duesseldorf, Germany
Tel: 011+49-211-518064-20
Fax: 011+49-211-518064-99

China:

Justrite Asia
Yin Hua Road 10
Yantian Port Bonded Logistics Park
Shenzhen, Guangdong Province
China 518 081
Tel: 011+86-755-33363999
Fax: 011+86-755-33980866

Return shipments must be authorized. Call customer service for RMA form.

©2010 Justrite Mfg. Co.
Code 775 (0330)

Need Other Storage Solutions?

For over 100 years Justrite has led the way in making workplaces safer and more productive. With hundreds of solutions for storing and dispensing hazardous materials, you'll find what's just right for you!



Warranty Disclaimer: Justrite has made a diligent effort to illustrate and describe the products in this catalog accurately; however, such illustrations and descriptions are for the sole purpose of identification, and do not express or imply a warranty that the products are MERCHANTABLE, or FIT FOR A PARTICULAR PURPOSE, or that the products will necessarily conform to the illustrations or descriptions. Always check for product specifications prior to purchase. No warranty or affirmation of fact, express or implied, other than as set forth in the limited warranty statement above is made or authorized by Justrite. Justrite reserves the right to correct publishing errors.

Note: Shipping weights are approximate.



www.justritemfg.com

